



Les Paul (PS3) 95121.805	World Tour (PS3) 95451.805	World Tour (PS2) 95449.805	Kramer (PS2) 95119.805	GH 5 (PS2 & 3) 95893.805	Warriors of Rock (PS3) 96142.805	Redoctane Mayflash (PS2) 95025
95121.806¹ 	95451.806² 	95449.806 	89119.806 	95893.806 	96142.806 	95025

1. The Les Paul 95121 will work with the World Tour 95415 guitar 2. World Tour Dongle 95451 will work with Les Paul 95121 guitar

TOP 5 MISTAKES TO AVOID

- 1. Assuming all dongles work**
Each family is different. Dongles are NOT interchangeable.
- 2. Buying guitars without dongles**
On the PS3, the guitar will not work without the correct dongle.
- 3. Mixing World Tour PS2 and Kramer dongles or mixing World Tour PS3 and GH5 dongles**
They look similar but are NOT compatible.
- 4. Trusting vague listings**
Always confirm the dongle model number in the photos.
- 5. Ignoring the guitar model number**
Always check the back or the guitar or inside the battery compartment.

FIND GUITAR MODEL NUMBER

1. Locate the ID label. Often on the back, or in the battery compartment

2. Locate the model number. (This was in the battery compartment). The first 5 digits determine the dongle to be used

TIPS

- Keep your dongle with your guitar.
- Store safely – dongles are hard to find!
- If it won't sync, 99% of the time it's a mismatched dongle.

PRO TIPS! If the first 5 digits of the guitar and dongle match, you are usually safe.

Repair or upgrade your Guitar Hero controller!

Don't let failing frets or a floppy whammy bar ruin the fun.

HobbyCNC replacement fret boards and repair parts bring new life to your controller!